

Crawler 3

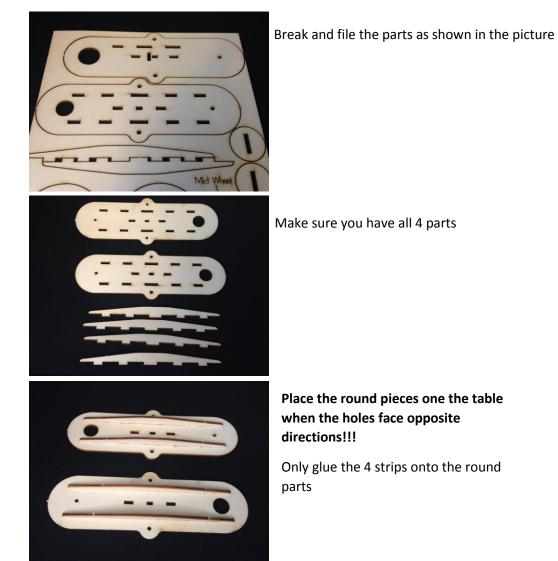

We are going to connect the hinges to the motors

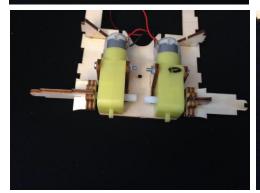




DO NOT USE GLUE!!


Just place the hinges onto the motors



Carefully break and file the parts as shown in the picture.

Please notice these are not the parts we just glued.

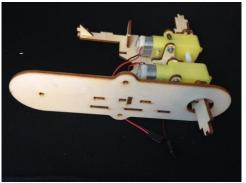

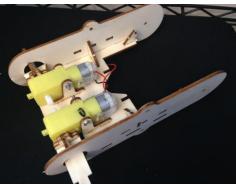


Glue one wall to the side of the base. Make sure the parts are inserted all the way with no spaces between the parts.

Do not put glue on the hinges!

After doing one side, please assemble the other wall as well.



CAREFULLY, break and file the parts as shown in the picture.

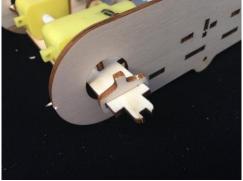




Break and file the parts as shown in the picture.


Push the part on the hinge, and slide it all the way down.

Do the same on both side.



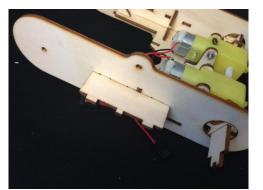

Glue the part on the side of the wall

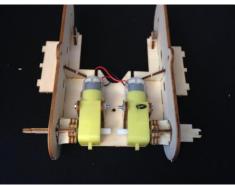

Once done, do the other side as well




Carefully break and file the parts as shown in the picture







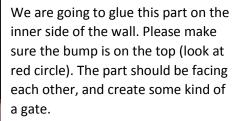

Check again all directions and part before ending class.